

Customer Information Note

Provided by: Propulsion Systems

Date document: 23-04-2020

CIN #0005

Subject: Changing the set temperature.

Issue:


In normal operation, the heat pump is locked when you don't use touch the display within a time periode of 5 sec. To change the set temperature you need to unlock the display. This customer information note explains how to change the set temperature as this might be difficult for some user.

Solution:

The heat pump settings can be changed using the following steps:



STEP 1 (verification).

Push any button of the display to know if the heat pump is locked or not.

The display blinks meaning the heat pump is locked. The LED beneath the  logo in the top left corner of the display is highlighted.

Do not touch the heat pump for 5 sec if you are not sure whether the display is locked or unlocked. After these 5 sec the heat pump will go automatically in lock.


STEP 2 (unlock).

Push the  button for 3 sec to unlock the controller. The LED beneath the  logo in the top left corner of the display is NOT highlighted. Meaning the controller is unlocked.

STEP3 (change set temperature).

Puch the upwards or downwards button to change the set temperature.

This menu will close and save any changes after 5 sec. After these 5 sec the heat pump will go automatically in lock.

The LED beneath the  logo in the top left corner of the display is highlighted indicating the heat pump is locked.